



## Screw Pattern


### { TUFF-RIB }

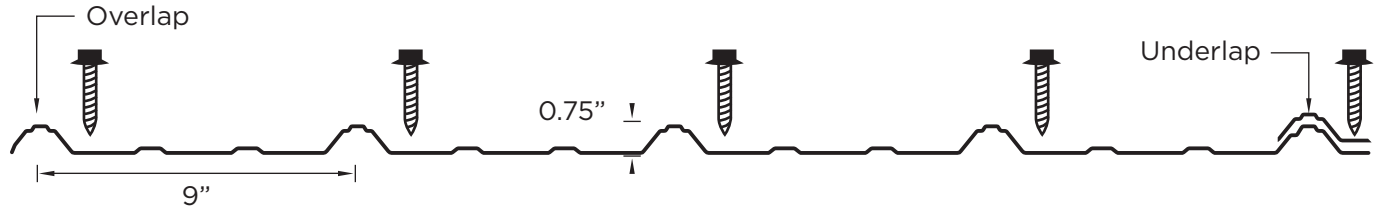


### { LOW-RIB }

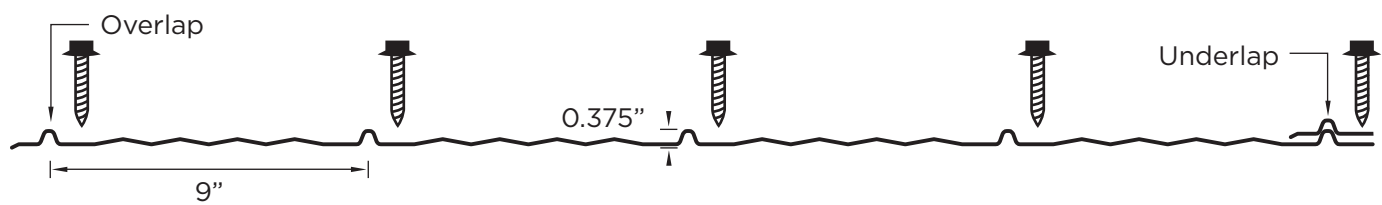

### { PBR }

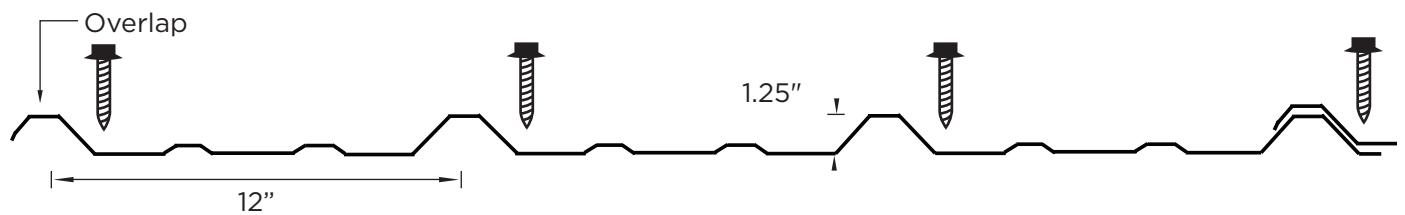

### { High Wind or Low Pitch Application - TUFF-RIB Illustrated }

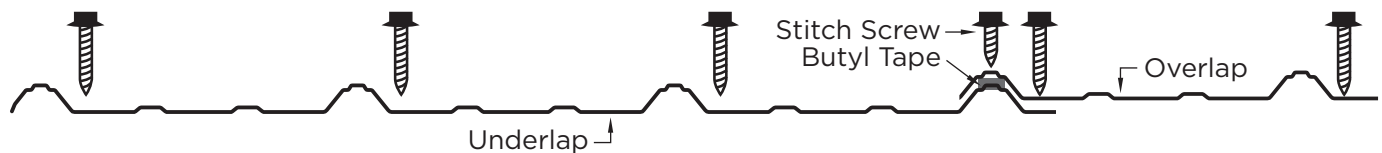


### { Bottom Edge Screw Pattern - PBR Illustrated }



### { FASTENER APPLICATION }

Correct



Sealing material slightly visible at edge of metal washer. Assembly is water tight.

Too Loose



Sealing material not visible, not enough compression to seal properly.

Too Tight



Sealing material extruded beyond edge of washer.